plastic universal joints and teleshafts

- · Backlash-free up to 108 turns
- Low mass
- · Low inertia
- · Corrosion resistant
- · Electrically isolating
- No maintenance


Huco-Pol is a range of light duty, backlash-free universal joints and teleshafts manufactured of acetal and non-ferrous metals.

They are suitable for intermittent applications where low mass, corrosion resistance and electrical isolation are desirable.

Huco-Pol joints and teleshafts have only a fraction of the torque capability of steel joints and are not intended to substitute for these in the normal way.

Huco-Pols are used in business machines, food processing plant, laboratory equipment and electro-medical apparatus among others.

Alternative polymers are available for high temperature operation.

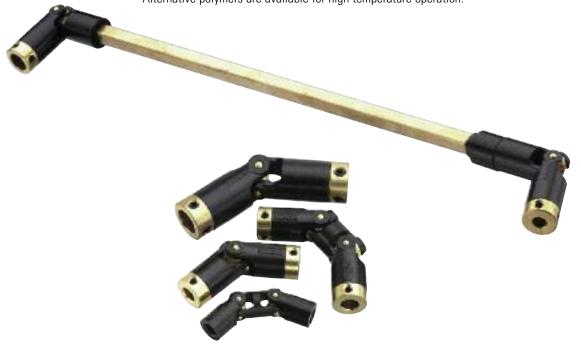











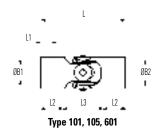

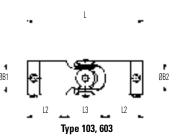

SINGLE JOINTS - DIMENSIONS & ORDER CODES

	1	②				Dime	nsions					Fasteners	
Size	Brass Cross-piece	Plastic Cross-piece	OD	L	L1	L2	L3	B1, B2 Max	Moment of inertia kgm2	Mass kg x 10-3	Size	Torque (Nm)	A/F (mm)
	Hub	Ref							x 10-8				
	101.06	-		19.1	3.3	5.3		4.76	0.3	0.7	_	_	_
06	-	601.06	7.1	10.1	0.0	0.0	8.6	4.70	0.2	0.4			
00	103.06	-	7.1	27.2	_	9.3	0.0	3.18	1.1	3.1	M3	0.94	1.5
	-	603.06		27.2		0.0		0.10	1.0	2.8	1110	0.01	1.0
	101.09	-		28.5	4.3	8.6	11.4	6.35	4.0	2.7	-	-	_
09	-	601.09	11.1	20.0				0.00	4.0	1.5			
	103.09	-	11.1	37.6	-	13.1		5.0	13.5	9.3	M3	0.94	1.5
	-	603.09							12.6	8.1			
	101.13	-		35.6	5.6	10.4		8.0	14.3	5.7	-	-	-
13	-	601.13	14.3			15.7	14.8	4.8	11.9	3.6			
	103.13	-		46.2	-			6.35	44.6	17.7	M3	0.94	1.5
	-	603.13							38.0	15.6			
	101.16	-		53.3	8.9	15.2		11.0	32.3	12.2	-	-	-
16	-	601.16	17.5				23.0		18.3	5.0			
	103.16	-		67.6	-	22.3		10.0	136	35.0	M4	2.27	2.0
00	105.00	603.16	00.0	00.0	0.0	47.0	00.0	40.7	122	31.4			
20	105.20	-	23.0	62.0	8.0	17.0	28.0	12.7	147	25.7	-	-	-
25	105.25	-	28.5	74.0	10.0	20.0	34.0	14	463	56	-	-	-
32	105.32	-	36.5	86.0	10.0	21.0	44.0	20	1339	103	-	-	-

SINGLE JOINTS - PERFORMANCE (at 20°C)

		Brass Cross-pied	ce 101, 103, 105			Plastic Cross-	piece 601, 603		Max		
Size	Peak Torque Nm	Static Break Torque Nm	Torsional Rate deg/Nm	Torsional Stiffness Nm/Rad	Peak Torque Nm	Static Break Torque Nm	Torsional Rate deg/Nm	Torsional Stiffness Nm/Rad	angular compensation @ 1000 rev/min	Max axial loading N	
06	0.11	0.45	19.7	2.9	0.09	0.3	22	2.6	45	18	
09	0.36	1.9	6.8	8.4	0.6	1.5	6.8	8.4	45	38	
13	0.85	4.5	3.2	18	0.7	2.5	3.6	16.0	45	67	
16	1.6	6.8	1.7	34	1.0	5.0	2.8	20.0	45	98	
20	2.8	17	0.94	61	-	-	-	-	40	138	
25	5.6	34	0.51	112	-	-	-	-	40	222	
32	10.7	72	0.25	229	-	-	-	-	40	334	

FOR STANDARD BORES SEE FACING PAGE

Materials & Finishes

Bodies: Acetal

Fasteners:

Cross-pieces: Brass BS 2874 CZ121,CZ122 (101, 103, 109, 111)

Nylon Glass filled (601, 603, 609, 611)

Bore Inserts: Brass BS 2874 CZ121 (103, 111, 603, 611)


Al. Alloy 2014A T6 (105) Alloy steel, black oiled Operating Temperature Range

- 20°C to +60°C

Maximum Rotational Speed

1000 rev/min



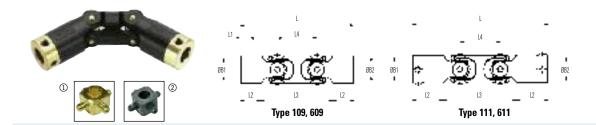

DOUBLE JOINTS - DIMENSIONS & ORDER CODES

	①	②					Dimensions						Fasteners	
Size	Brass Cross-piece	Plastic Cross-piece	OD	L	L1	L2	L3	L4	B1, B2 Max	Moment of inertia kgm2	Mass kg x 10-3	Size	Torque (Nm)	A/F (mm)
	Hub	Ref								x 10-8				
	109.06	-		27.2	3.3	5.3	F 2		4.76	0.6	1.1			
06	-	609.06	7.1	21.2	3.3	0.0	16.7	8.1	4.70	0.4	0.6	=	-	-
00	111.06	-	7.1	35.3	_	9.3	10.7	0.1	3.18	1.3	3.5	M3	0.94	1.5
	- 611.06		55.5		3.3			3.10	1.1	3.0	IVIJ	0.34	1.3	
	109.09	-	11.1	41.7	4.3	8.6		13.2	6.35	5.9	4.5	_	-	_
09	-	609.09		11.7	1.0	0.0	24.6		0.00	5.8	2.0			
00	111.09	-		50.8	-	13.1		10.2	5.0	15.3	11.1	M3	0.94	1.5
	-	611.09		00.0		10.1			0.0	14.0	8.6		0.01	
	109.13	-		51.4	5.6	5.6 10.4			8.0	23.7	9.6	_	-	_
13	-	609.13	14.3	• • • • • • • • • • • • • • • • • • • •	0.0		30.7	15.9	0.0	21.5	7.5			
	111.13	-		62.1	-	15.7	00	10.0	6.35	50.4	21.6	M3	0.94	1.5
	-	611.13								50.4	15.6			
	109.16	-		75.5	8.9	15.2			11.0	63.5	19.7	-	-	-
16	-	609.16	17.5			10.2	45.2	22.2	11.0	35.5	12.5			
	111.16	-		89.8	-	22.3		EE.E	10.0	178.0	42.4	M4	2.27	2.0
	-	611.16		22.0						150.0	35.2	,		,

SINGLE JOINTS - PERFORMANCE (at 20°C)

		Brass Cross-p	piece 109, 111			Plastic Cross-	Max			
Size	Peak Torque Nm	Static Break Torque Nm	Torsional Rate deg/Nm	Torsional Stiffness Nm/Rad	Peak Torque Nm	Static Break Torque Nm	Torsional Rate deg/Nm	Torsional Stiffness Nm/Rad	angular	Max radial compensation mm
06	0.08	0.34	81.9	0.7	0.08	0.3	115	0.5	90	5.6
09	0.16	1.9	13.3	4.3	0.16	1.5	17.3	3.3	90	9.1
13	0.59	3.4	8.1	7.1	0.59	2.5	10.4	5.5	90	10.9
16	1.3	6.8	4.5	12.6	1.0	5.0	7.5	7.6	90	15.5

STANDARD BORES

Size		Bore tolerences 101, 601, 109, 609 = +0.04/-0.0mm ● 103, 603, 111, 611 = +0.03/-0.0mm																	
3126	3	3.175	4	4.763	5	6	6.350	8	9.525	10	12	12.700	14	15.875	16	18	19	19.050	20
06	•	•	•	•															
09	0	0	•	•	•	•	•												
13			0	0	0	•	•	•											
16						0	0	•	•	•									
20								0	0	0		0							
25										0	0	0							
32													0	0	0	0	0	0	0
Bore Ref	14	16	18	19	20	22	24	28	31	32	35	36	38	41	42	45	46	47	48

- Moulded bores only
 Moulded or sleeved bores available




Constant velocity

The velocity ratio of single universal joints is not constant when the working angle is greater than zero. Their geometry gives rise to sinusoidal fluctuations at the output that increase with the working angle and which vary between:

 $\omega \mbox{ cos } \beta \mbox{ and } \omega \mbox{ sec } \beta$ where $\omega = \mbox{angular velocity}$ and $\beta = \mbox{operating angle}$

For example, when the operating angle is 5° , the maximum error is $\pm 0.4\%$; at 7° it is $\pm 0.8\%$, and at 10° it is $\pm 1.5\%$. A motor shaft turning at a constant 1000 rpm, driving through a single universal joint set at an operating angle of 5° , produces an output that fluctuates between 996 rpm and 1004 rpm twice each revolution.

The fluctuations are cancelled out when using a double joint or two single joints connected back to back.

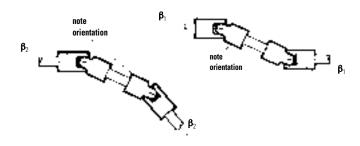

To maintain constant velocity ratio, ensure that:

- a) The orientation of two single joints is correct; the inboard forks should align as in double joints.
- b) The working angle of both joints, or both halves of a double joint, is the same.

ADJUSTED TORQUE

Peak torque values apply when the working angle is zero. Adjusted torque takes account of dynamic loading at the bearings. To find adjusted torque, determine application speed, torque and operating angle,

Then:

a) multiply speed x working angle

b) subtract the result from 10000

c) divide the answer into 10000

d) apply the result to the application torque.

eg. speed = 400 rpm application torque = 0.1Nm working angle = 20°


Accordingly:

a) 400 rpm x 20° = 8000 b) 10000 - 8000 = 2000 c) 10000 / 2000 = 5 d) 5 x 0.1Nm = 0.5Nm

Select a joint where Peak Torque exceeds 0.5Nm, ie., size 13 or larger.

Note: To remain within the capacity of the joint, the result of speed x working angle must be less than 10000.



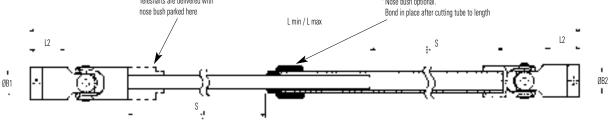





8 Pefs. 130 & 497

÷

Joints sleeved with metal inserts. Attach to shafts by cross-pinning or bonding

Typical

DIMENSIONS & ORDER CODES

Teleshaft	① Teleshaf	t options	ØD	L	L	Stroke	L2	ØB1, ØB2	Mass	Corresponding joints.	
size	Standard tubes self-colour brass	Wear-resistant tubes Niflor coated		±1.0				max	kg x 10–3	For dimensions	
	telesh	aft REF		min	max	S	2		3	see	
09	128.09.240	495.09.240	11.1	240	389	149	13.1	5	36	103.09	
13	128.13.300	495.13.300	14.3	300	484	184	15.7	6.35	58	103.13	
16	128.16.450	495.16.450	17.5	450	730	280	22.3	10	168	103.16	
20	130.20.464	497.20.464	23.0	464	745	281	17.0	12.70	241	105.20	
25	130.25.500	497.25.500	28.5	500	784	284	20.0	14	457	105.25	
32	130.32.564 497.32.564		36.5	564	868	304	21.0	20	827	105.32	

- ① Niflor is a proprietory PTFE impregnated electroless nickel plating process.
- ② Max shaft penetration
- 3 Values apply with max bores.
- A range of standard telescopes is available which can be shortened to achieve an infinite number of length/stroke requirements. The lengths L min shown in the table above are the longest of the standard range in each size. Specific lengths are produced by cutting an equal amount from both ends of the nearest standard size. See next page for recommended procedure.
- Custom Teleshaft assemblies can be factory made subject to minimum order quantities.
- *The nose bush eliminates any torsional free play that may be apparent in the tubes due to working clearances.
- Full details of the standard range and product order codes are available on request. Please ask for a Huco Teleshaft data sheet.

STANDARD BORES

Teleshaft							ØB1, Ø	B2 +0.03	/ – 0mm						
size	3.175	4	4.763	5	6	6.350	8	9.525	10	12	12.700	15.875	16	19.050	20
09	•	•	•	•											
13		•	•	•	•	•									
16					•	•	•	•	•						
20								•	•						
25										•	•				
32												•	•	•	•
Bore ref.	16	18	19	20	22	24	28	31	32	35	36	41	42	47	48
Correspo bore ada				251		253	255		257		259		260		261

Diameters for which a bore adaptor is shown can be adapted to smaller shaft sizes. See page 60 for details.




Extensible drive shafts (teleshafts), are useful when the distance between actuator and load varies during operation, or needs to accommodate component variances, or when a quick disconnect facility is needed in the drive line.

Huco teleshafts are in keeping with the light duty capabilities of plastics universal joints and employ precision drawn square brass tubes as the telescoping medium. These can easily be cut by the user to provide an extensible drive shaft with customised dimensions.

There are 2 ways to arrive at a customised teleshaft: empirically (shown below), or with tables that provide all necessary data on stroke and tube lengths for teleshafts with and without nose bushes up to 520mm retracted length.

Empirical method (based on the retracted length).

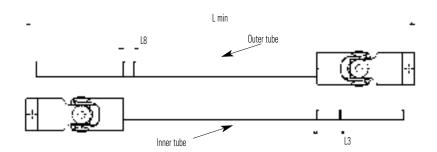


Size	L3	L8
09	8.6	3.2
13	10.4	4.3
16	15.2	6.1
20	17.0	8.2
25	20.0	10.3
32	21.0	18.0


- Disengage the teleshaft, remove the nose bush parked on the inner tube and keep it in case you need to use it later. Then lay the 2 halves of the teleshaft side by side.
- Slide one half alongside the other so that overall length L *min* matches the intended length of the teleshaft when *fully retracted*. With a felt tip pen, draw a line across the outer tube at the point where this is level with the inboard end of the universal joint.
- If you are sure that the teleshaft will satisfactorily extend the required amount, cut the tube at the line.
- Mark the inner tube in the same way, then add an amount equivalent to dimension L3 for your teleshaft size and draw a second line. Cut the tube at this second line.

- Now re-engage the tubes, taking care to orientate them correctly so that the
 inboard forks of the joints are in the same plane, and retract the teleshaft. The
 overall length should be as intended, and both tubes should bottom out
 simultaneously.
- If required, the nose bush can now be fitted by bonding it to the outer tube with an
 instant adhesive, (factory fitted bushes are retained by a barbing technique). The
 bush will add an amount equivalent to dimension L8 to the retracted length.
 Cutting this amount from the outer tube will reinstate the intended retracted
 length.
- The purpose of the nose bush is to eliminate any torsional free play that may be apparent in the tubes due to working clearances.

How to order customised teleshafts

Please specify your teleshaft by completing the questionnaire

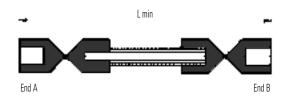

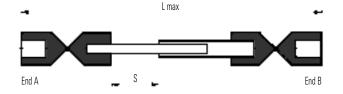

Teleshaft size		09 13 16 20 25 3	2							
			_							
Teleshaft ref.		128 130 495 49	7							
Bore diameter	End A									
Bore diameter	End B									
Fitted nose bu	sh (end B only)									
Speed of rotat	ion	rpm								
Please specify	:									
L min	and/or									
L max	and/or									
Stroke S										
	ne parameter is which one is critical?									
Please quote	pcs									
Projected annu	ial otys nes									



Your partner in quality engineering products since 1986

Thank you for viewing product information on TEA's range of engineering components.

Now please contact us at the nearest office to you for any further information, prices and availability:



AUSTRALIA & New Zealand T.E.A. Transmissions Pty Ltd Tahiti Road Tiaro Qld 4650 Australia

Ph: 61-(0)7 4129 2533 Fax: 61-(0)7 4129 2437 Email: sales@tea.net.au www.tea.net.au



USA, South America & Canada T.E.A. Machine Components Inc. 2281-F Dabney Road Richmond Virginia 23230 USA

Ph: 1-804-342-0004 Fax: 1-804-342-0006 Email: sales@teausa.net www.teausa.net

You are assured of prompt and efficient service at all time.